



**ISO14001
CERTIFICATE**

Registration No. 04207E20020R2M



**OHSAS 18001
CERTIFICATE**

Registration No. 04207S10006R1M



**GB/T28001
CERTIFICATE**

Registration No. 04207S10006R1M



**ISO9001
CERTIFICATE**

Registration No. CNAB010-Q



**ISO14001
CERTIFICATE**

Registration No. CNAB040-E



**GB/T28001
CERTIFICATE**

Registration No. CNAB040-S



东芝电梯(中国)有限公司

Toshiba Elevator (China) Co., Ltd.
地址: 上海市宝山区蕴川路685号
邮编: 201901
电话: 021-56808888
传真: 021-56806789

黑龙江分公司 Heilongjiang Branch

地址: 黑龙江省哈尔滨市南岗区铁路街8号昆仑大酒店2801室
邮编: 150006
电话: 0451-53864851 53864852
传真: 0451-53864597

吉林分公司 Jilin Branch

地址: 长春市朝阳区西安大路2008号奥士广场1号楼508室
邮编: 130061
电话: 0431-88819218
传真: 0431-88819216

沈阳分公司 Shenyang Branch

地址: 辽宁省沈阳市浑南新区飞云路5号
邮编: 110168
电话: 024-23818888 23812277
传真: 024-23810790

大连分公司 Dalian Branch

地址: 辽宁省大连市中山区上海路4号上奥大厦1607/南间
邮编: 116001
电话: 0411-82642679 82649979
传真: 0411-82642112

内蒙古分公司 Neimenggu Branch

地址: 呼和浩特市赛罕区大学东路亚区商务中心12楼
邮编: 000010
电话: 0471-4380738
传真: 0471-4380738

北京分公司 Beijing Branch

地址: 北京市曙光里甲6号时间国际8号楼510室
邮编: 100028
电话: 010-64448441 64448442 64448443
传真: 010-64448388

天津分公司 Tianjin Branch

地址: 天津市南开区红旗路220号慧谷大厦901室
邮编: 300190
电话: 022-24213135
传真: 022-24213135-612

河北分公司 Hebei Branch

地址: 石家庄市长安区广安街91号世纪方舟B座906室
邮编: 050011
电话: 0311-88888100/12
传真: 0311-88878162

陕西分公司 Shanxi Branch

地址: 西安市高新三路财富中心二期D座1108室
邮编: 710065
电话: 029-65877158
传真: 029-65877157

河南分公司 Henan Branch

地址: 河南省郑州市黄河路28号中孚大厦12楼E座
邮编: 450003
电话: 0371-63588077
传真: 0371-63588386

东芝电梯(沈阳)有限公司

Toshiba Elevator (Shenyang) Co., Ltd.
地址: 辽宁省沈阳市浑南新区飞云路5号
邮编: 110168
电话: 024-23818888 23812277
传真: 024-23810790 23813333

山西分公司 Shanxi Branch

地址: 太原市凤城街北方君威财富中心2002室
邮编: 030012
电话: 0351-7823458
传真: 0351-7823771

山东分公司 Shandong Branch

地址: 青岛市市南区香港中路10号颐和园国际A座1808室
邮编: 266071
电话: 0532-68888315
传真: 0532-68888319

江苏分公司 Jiangsu Branch

地址: 南京市秦淮区太平南路450号新亚财富中心703室
邮编: 210001
电话: 025-86644710 86644380
传真: 025-84456620

浙江分公司 Zhejiang Branch

地址: 浙江省杭州市拱墅区广场东银泰路8号中奥大厦1305室
邮编: 310009
电话: 0571-87707341 87707411
传真: 0571-87707342

湖北分公司 Hubei Branch

地址: 武汉市江阳区建设大道568号新世界国贸大厦1座3308-3307室
邮编: 430015
电话: 027-85381350
传真: 027-85381360

安徽分公司 Anhui Branch

地址: 合肥市瑶海区胜利路与琅琊山路口菱湖国际大厦2203室
邮编: 230001
电话: 0651-64248220
传真: 0651-64241163

上海分公司 Shanghai Branch

地址: 上海市闸北区共和新路3088号1号楼财富广场7号楼807室
邮编: 200436
电话: 021-31002525
传真: 021-31002582

江西分公司 Jiangxi Branch

地址: 南昌市八一大道2号海宸国际金融大厦写字楼913-914室
邮编: 330002
电话: 0791-88234220
传真: 0791-88234230

济南分公司 Jinan Branch

地址: 济南市历下区山大路157号华强广场A号楼8层1-805室
邮编: 250013
电话: 0531-88092277
传真: 0531-88092277

四川分公司 Sichuan Branch

地址: 四川省成都市锦城大道306号凯乐广场18楼
邮编: 610017
电话: 028-86527998
传真: 028-86527087

重庆分公司 Chongqing Branch

地址: 重庆市九龙坡区杨家坪珠江路48号西城国际10-08室
邮编: 400080
电话: 023-62946355
传真: 023-62946356

甘肃分公司 Gansu Branch

地址: 兰州市城关区广场南路4-6号医药大酒店商务楼1203
邮编: 730030
电话: 0931-4890489
传真: 0931-4890507

云南分公司 Yunnan Branch

地址: 云南省昆明市穿金路尚俊豪C座1105-1108室
邮编: 650000
电话: 0871-63611884
传真: 0871-63614561

贵州分公司 Guiyang Branch

地址: 贵阳市市南区香港中路10号颐和园国际A座2楼2号
邮编: 550003
电话: 0851-6889579
传真: 0851-6889579

新疆分公司 Xinjiang Branch

地址: 新疆乌鲁木齐市南湖南路133号城建大厦5层501室
邮编: 830011
电话: 0991-4663079, 4663860, 4663670
传真: 0991-4663677

湖南分公司 Hunan Branch

地址: 湖南省长沙市穿金路尚俊豪C座1105-1108室
邮编: 410001
电话: 0731-82273035 82273036
传真: 0731-82273037

福建分公司 Fujian Branch

地址: 福建省福州市五四北路167号新天地大厦17层A单元
邮编: 350003
电话: 0591-87807729 87807752
传真: 0591-87807210

广东分公司 Guangdong Branch

地址: 广州市天河路625号天和娱乐广场东塔1602-1603室
邮编: 510630
电话: 020-87573547 87573548
传真: 020-87574812

深圳分公司 Shenzhen Branch

地址: 深圳市福田区南园局608号上步大厦10楼A、B、L座
邮编: 518031
电话: 0755-83961355
传真: 0755-83961455

海南分公司 Hainan Branch

地址: 海口市金贸中路1号中山花园海天阁2068房
邮编: 570125
电话: 0898-88564538
传真: 0898-88564538

苏州办事处 Suzhou Branch

地址: 苏州观前街1156号金狮大厦9楼J座
邮编: 215011
电话: 0512-68789365
传真: 0512-68789365

廊坊办事处 Langfang Branch

地址: 河北省廊坊市广阳区新华路76号天和博益商务中心7层701室
邮编: 065000
电话: 0316-2767-535
传真: 0316-2767-535

厦门办事处 Xiamen Branch

地址: 厦门市思明区湖滨北路57号B1000国际商务中心330室
邮编: 0592-4376000
电话: 0592-5032230
传真: 361013

TOSHIBA

Leading Innovation >>>



安全注意事项 ●必须严格遵守相关的规章制度。Observance of relevant laws / regulations are required.
●为了您的安全, 使用前请仔细阅读《操作指南》。Read the entire "Instruction Manual" carefully before use, for important about safety, handling and operation.

TOSHIBA 东芝

东芝电梯(中国)有限公司

TOSHIBA ELEVATOR (CHINA) CO., LTD.

地址:上海市宝山区蕴川路685号 邮编:201901

电话:(021)56808888 传真:(021)56806789

网址:http://www.toshiba-elevator.com.cn

本图册仅反映了载稿时的电梯配置情况。我公司保留随时改变技术参数、式样的权利。
本图册仅提供一般信息, 图册效果可能与实物颜色等有区别, 并不作合同性文件, 具体配置参数以正式合同约定为准。

TCE2015-01-01

引领时代潮流，满足苛刻需求

Leading the times, meeting the strict needs

▲ 唯 美

AESTHETIC

明亮的玻璃饰板 轻快简洁的线条
和谐中不失唯美


With bright glass decorating board and frisk line in clarity,
harmony is combined with aestheticism.

▲ 创 新

INNOVATIVE

将当代设计与技术得以完美呈现

The modern design and skills are perfectly presented in
front of your eyes.

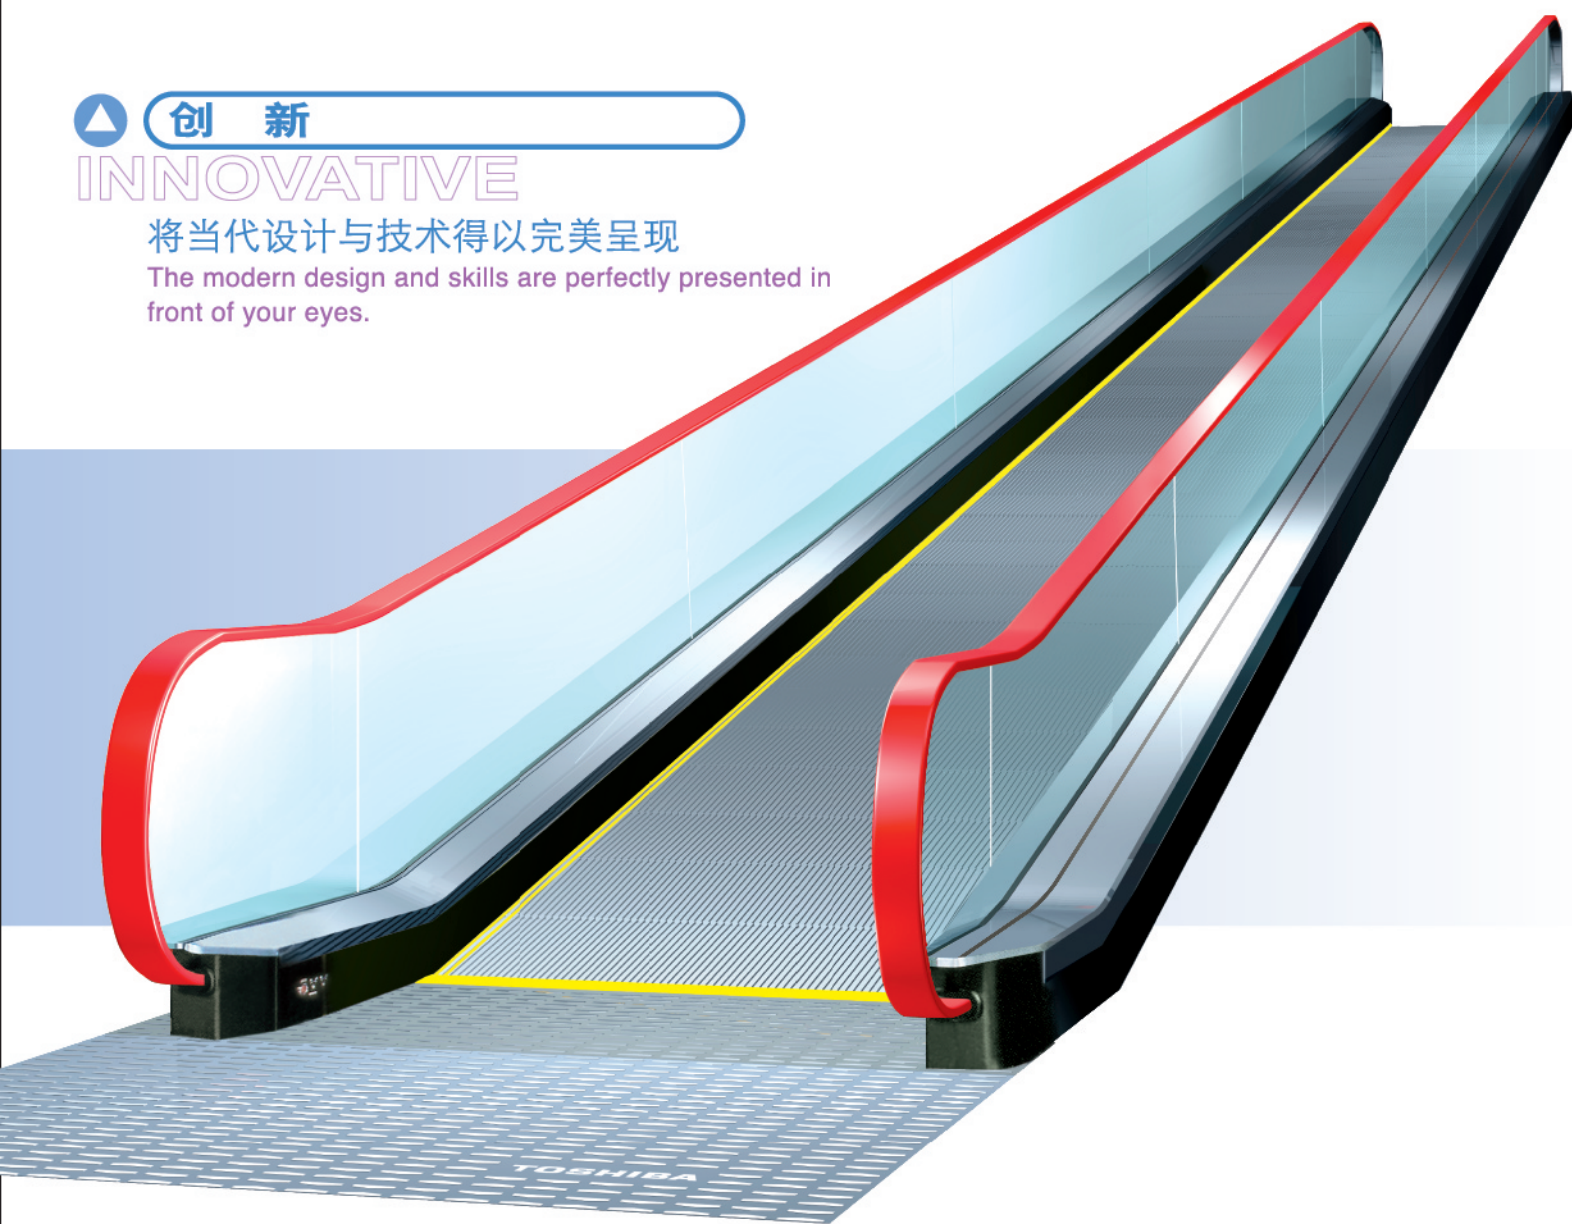

东芝自动人行道为您演绎精致生活

Toshiba Autoroad helps you enjoy the delicate life





▲ 享 受

ENJOYING

步道的延伸 空间的交错

行进间让您疲惫的身心得到片刻的休憩

The expansion of the pavement, the interveining of the space
and the moving can rest your exhausted body and heart.

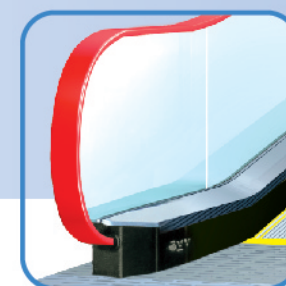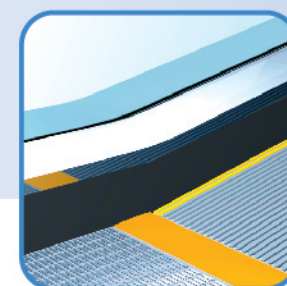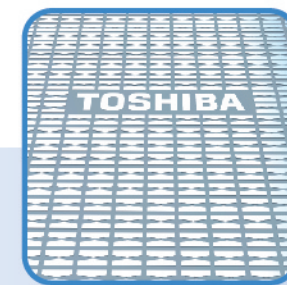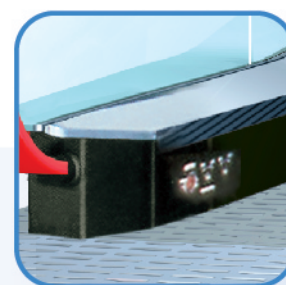


▲ 实 用

PRACTICAL

穿梭于来往人群中 不经意发现简约便捷的自动人行道
已与快节奏的生活悄然融合

When shuttling among the crowd coming and going, you may casually
find the simply but convenient autoroad has quietly integrated with the
life at rapid rhythm.

GROUND PLAN

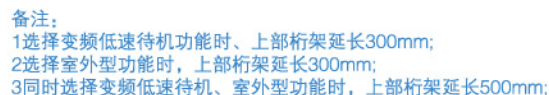

FRONT PLAN





建筑施工

- 与土建尺寸不符之处，须按要求整改。
- 安装用地面预留孔施工。
- 桁架承重梁施工（承受的反力须满足我公司指定的数值）。
- 中间支撑的承重梁施工（承重梁的间距超过我公司规定的尺寸时）。
- 起重吊装设备安装用梁及孔的施工。
- 墙壁，地面，天花板等装饰施工。
- 复数自动人行道时，升降板间地面（外侧板间装饰）的装饰施工。
- 如果安装后的自动人行道之间有间隙，或自动人行道侧面为天井时，投入使用前，需在自动人行道周围设置防坠落网或防坠落栏杆等固定设施。（此项客户自理）
- 桁架外装修施工（外装重量 < 20kg/m²）。
- 自动人行道地坑若置于基础层须加防水处理及大于桁架深度。



设备施工

- 接至上部桁架内的机房内电源开头的动力用电源，照明用电源及接地线的引线施工。
- 外装照明施工及外装照明用电源的引线施工。
- 当地规定的防火设备的施工（使用防火护帘时，须提供连动用接点及管路配线施工到机房）。
- 升降口的停电时备用照明设备施工。
- 监视盘用信号配线，配管的施工。
- 所有电线配管，自动消防装置或底部照明灯必须完全安装在桁架外侧。



施工附带要求事项

- 请无偿提供工地现场，现场施工办公室，材料堆放及材料保管室。
- 请确保机器和重物搬入口及通道的畅通和通道周围的保护措施。
- 施工前与施工期间的落下物防护栏等的设置。
- 安装完毕至正式使用开始的其间，落下物及粉尘的防护等保护措施。
- 安装施工和调试运行的电力使用的无偿提供。
- 特殊搬入的费用须由客户另行支付。
- 与自动人行道无关的物件不可将其以任何方式安装或连接在桁架上。
- 在样本内等一切标注“客户自理”的项目。




其他

- 自动人行道的电源电压波动在± 5% 范围内。
- 建筑物内的湿度保持在月平均 90% 以下，日平均 85% 以下 (25℃)，以避免发生结露。
- 建筑物内的温度保持在 5℃-40℃。
- 自动人行道不可置于风雨条件下。
- 机房内不应有腐蚀金属，影响电路接点接触的化学物质和增加机械磨损的灰尘。



安全装置布置详图

DETAILED DISTRIBUTION DRAWING OF SAFETY EQUIPMENT

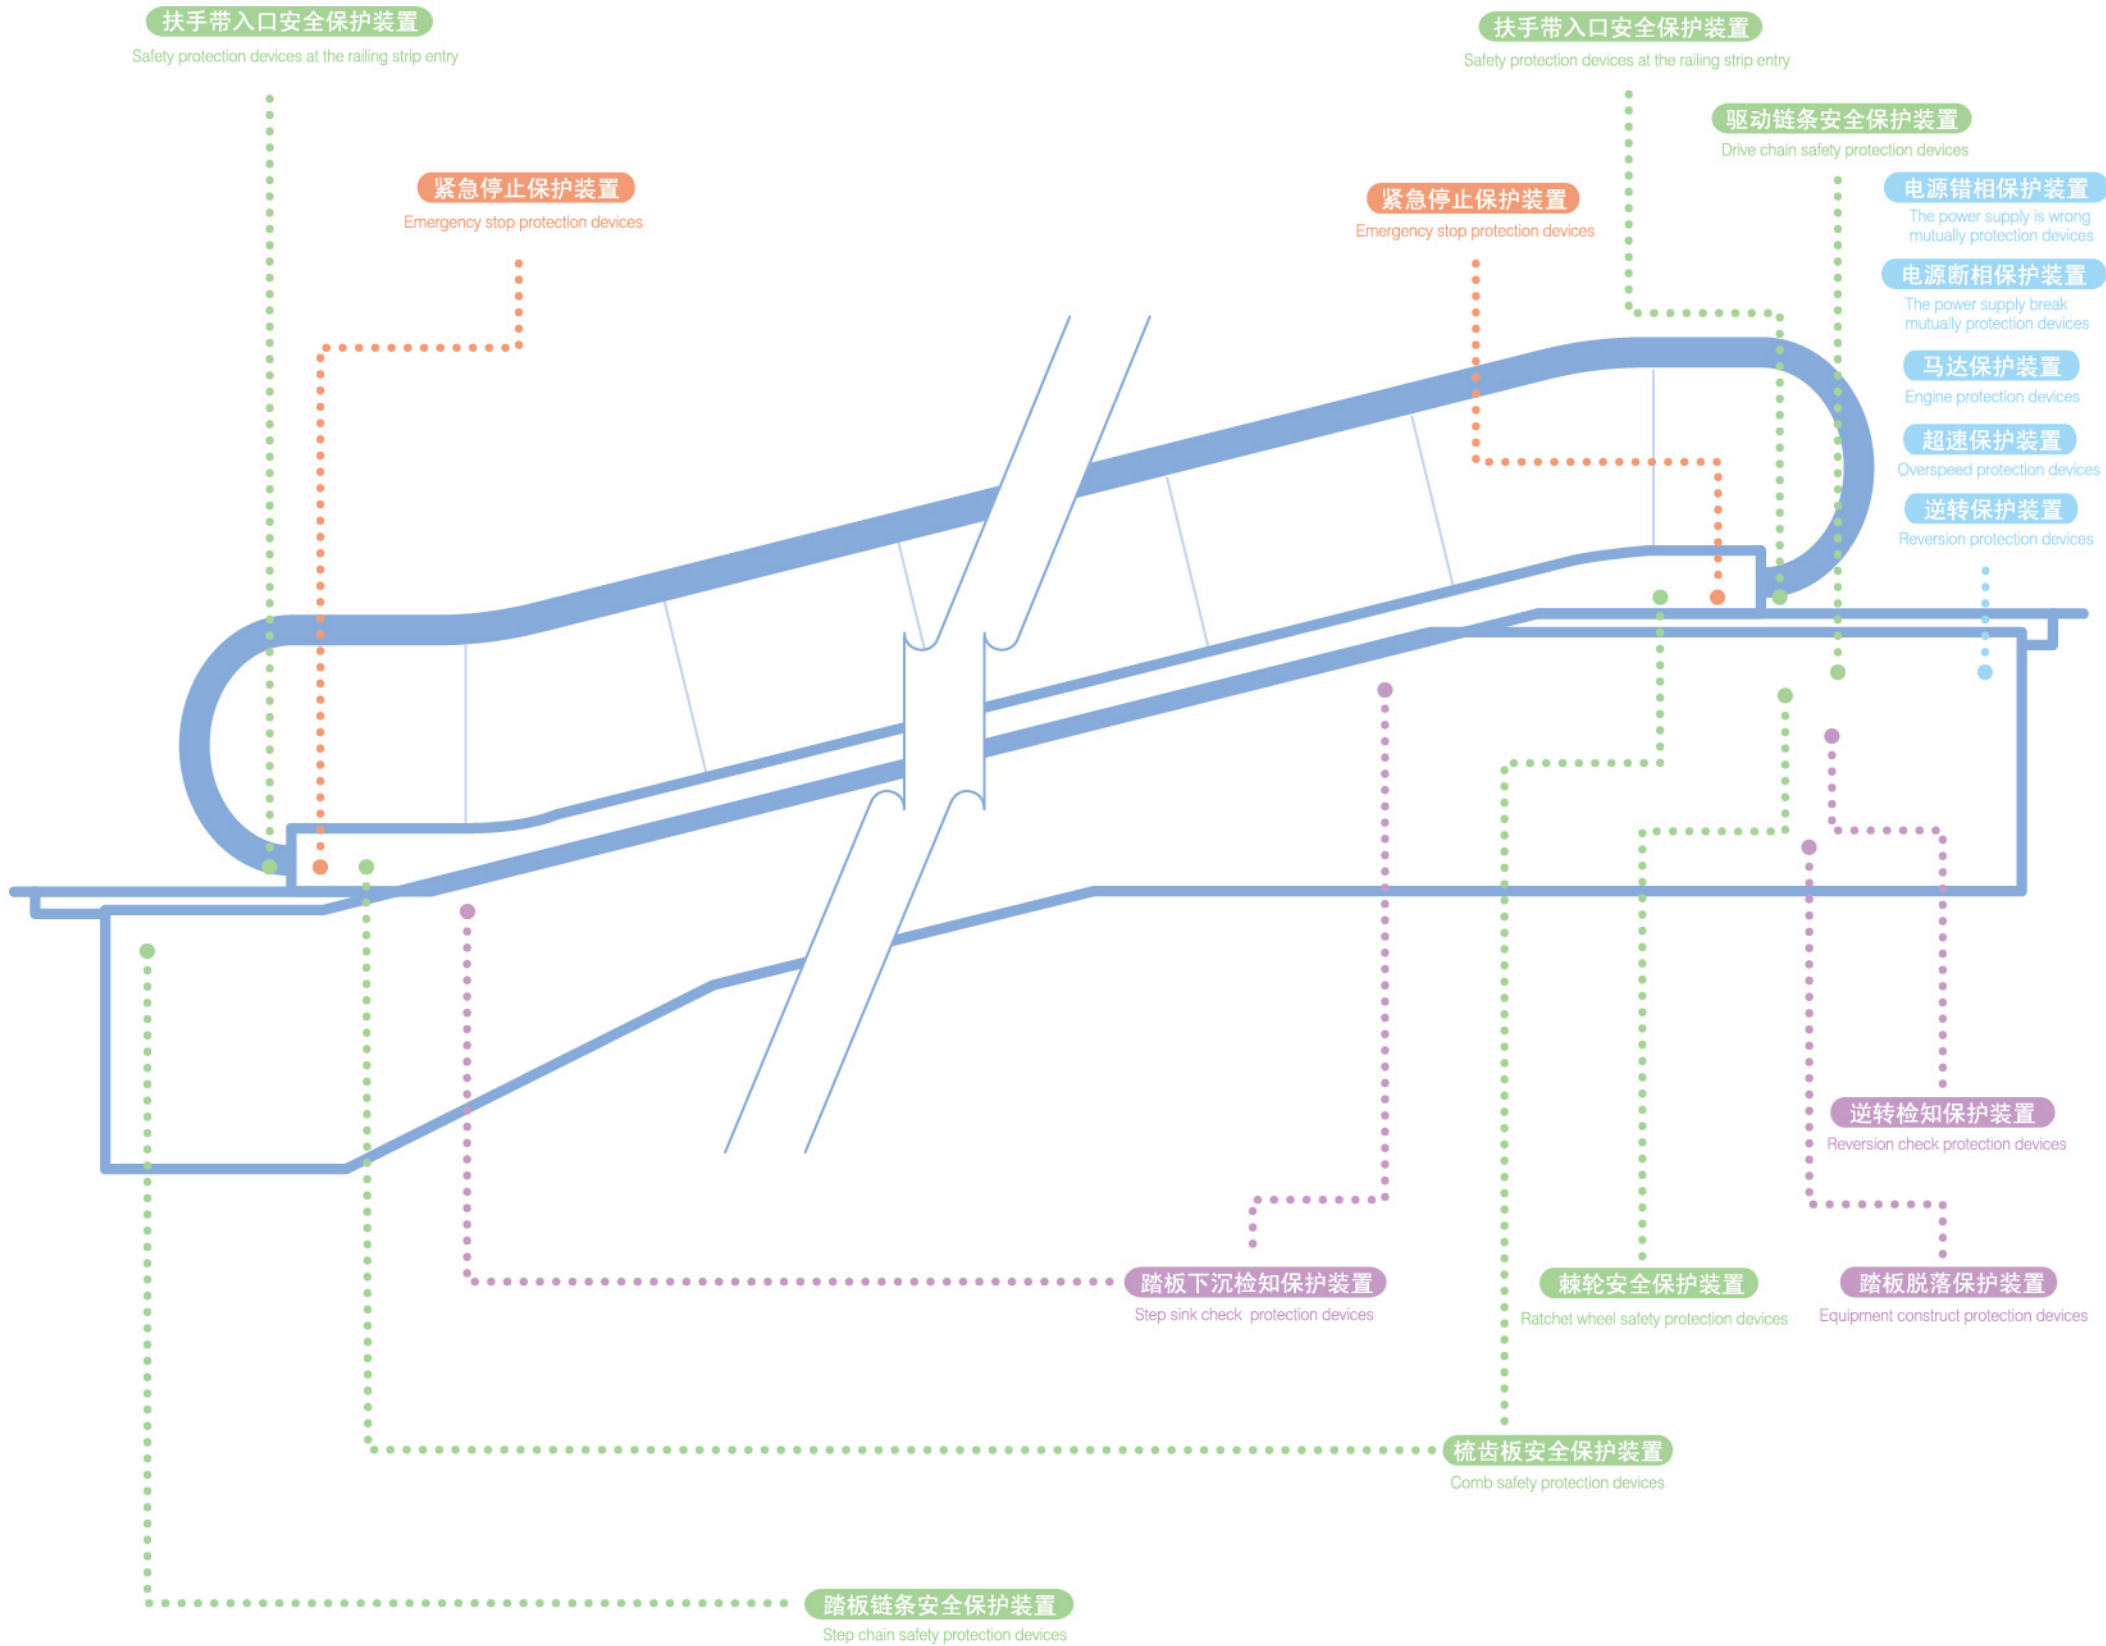

ARCHITECTURE
CONSTRUCTION

- The inconformity with the construction sizes should be rectified as required.
- Construction of the reserved ground hole for installation.
- Construction of the bearing girder of the purlin (the reversed strength to bear should meet the given value by our company).
- Construction of bearing girder at middle support (the space between the bearing girder exceeds the regulated sizes by our company).
- Construction of beam and hole for installation of lifting and loading equipment
- Decoration construction of walls, ground, ceiling, etc.
- Decoration construction of grounds between lifting boards (external side-boards decoration) when the autoroad is plural.
- If there is clearance between installed autoroad or the flank of autoroad is parois, set of the falling protection web or fence around the autoroad before using. (Paid by the customer)
- Decoration construction outside the girder (external load weight < 20kg/m²)
- If the ground hole of the autoroad is at the ground floor, water-proof treatment should be carried out to exceed the depth of the girder.



EQUIPMENT
CONSTRUCTION

- Connect to the drive power at the machine room in the upper girder, and construct the down-lead of illuminating power and earthing line.
- Illuminating construction outside and down-lead construction of illuminating power outside.
- Construction of fire-fighting equipment as regulated locally (when the fire-fighting curtain is used, linking point to connect with the drive power should be provided and the construction of supplementary line along the tube path should be completed to the machine room).
- Construction of spare illuminating equipment at the lifting entry in case of power cut.
- Construction of supplementary signal line and tube for the monitoring panel.
- All the supplementary tube for the electricity line, auto-fire fighting equipment or bottom illuminating light should be completely installed outside the girder.



REQUIREMENTS FOR
THE CONSTRUCTION

- Provide free of charge the workplace onsite, onsite construction office, material piling and material storage room.
- Ensure that the entry and channel of moving the machine and valued products are smooth and that places around the channel has protection measures.
- Setting of protection fence for dropped matters before and during the construction.
- Protection measures for dropped matters and dust during the period from completion of the installation and beginning of formal use.
- Providing electricity free of charge for installation and debugging operation.
- The charges for special transportation should be paid by the customer.
- Things that have nothing to do with the autoroad should not be installed on or connected with the girder in any way.
- All the programs that are noted "paid by the customer" in the sample.



OTHERS

- The fluctuation of the power voltage of the autoroad should be within +5%.
- The humidity inside the architecture should be maintained at monthly average below 90%, and daily average below 85% (25℃), to avoid formulation of dew.
- The temperature inside the architecture should be kept at 5℃-40℃.
- The autoroad cannot be set in rain.
- Inside the machine room, there should not be chemical gas that will erode the metals and affect the contacts between circuit linking points, and dust that will increase mechanical wear.